



INVIZBOX
PRIVACY MADE EASY

InvizBox Go Quick Start Guide

Welcome to your new
InvizBox Go!

Follow the steps using your
phone or laptop and this
guide to get setup.



If you purchased an InvizBox Go for use with a third-party VPN provider, you will need to provide your VPN credentials in step 5.

What's Inside?



InvizBox Go

Micro USB Cable

Quick Start Guide

WiFi Password Card

Protective Case

Powering On


Step 1



Quick press - displays battery status
Long press (2s) - powers device on/off

Connecting

Step 2

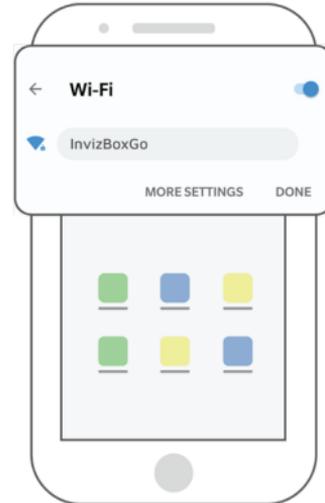

Connect a device to the "InvizBoxGo"
WiFi hotspot using the password card
provided in the box.

Administration Interface App

Step 3 A



For the smoothest experience download the InvizBox Administration app available for Android and iOS.

Administration Browser

Step 3 B




<http://inviz.box>

Otherwise you can open the Administration Interface using your favourite browser.

Getting Setup


Step 4

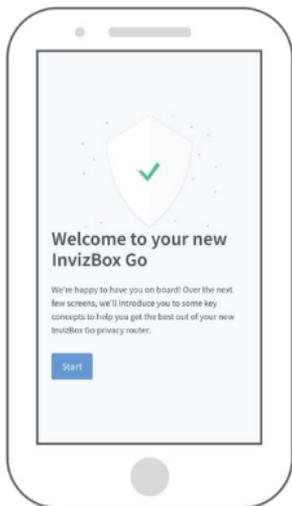

The Administration Interface will present this onboarding page. Follow the on-screen instructions.

VPN Credentials

Step 5

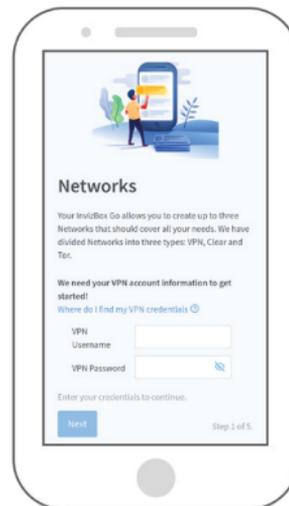

If you purchased your InvizBox Go for use with a third-party VPN provider, your VPN credentials are needed on this page.

Logging In


Step 6 A



Use the supplied password card to log into your InvizBox Go Administration Interface.

Home Page

Step 6 B

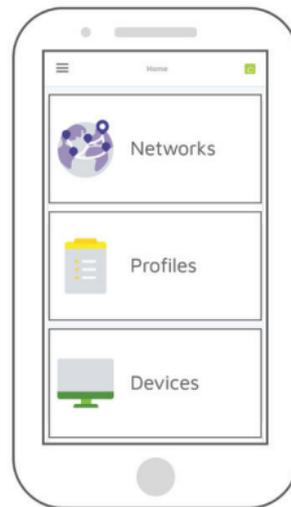


On the Administration Interface you can customize all of the settings on your InvizBox Go.

Connecting To WiFi

Step 7

Ready

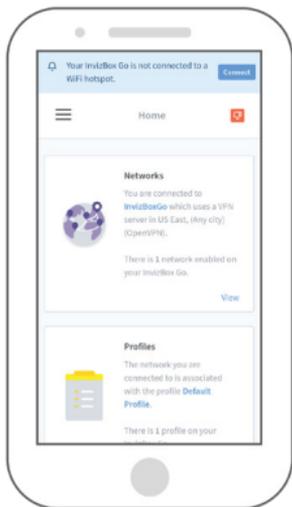


Using the banner, you can choose which WiFi to connect to. Once connected, a second banner may appear if you need to log in to access that WiFi.



Your InvizBox Go is now ready to use. If you need further information about your InvizBox Go, see pages 7-10.

Charging

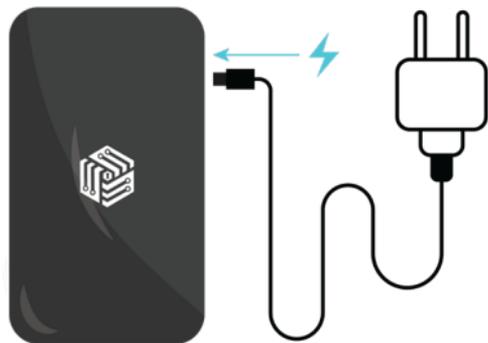

Using the micro USB cable provided, connect your InvizBox Go to a suitable power outlet.

Power Bank



You can power other devices by plugging them into the larger USB port on the InvizBox Go.

Battery Information



Device powered on and full battery.



Device at <75% power.



Device at <50% power.



Device at <25% power.



Device is powered off.



Device flashing indicates low power.

To check the power status of your InvizBox Go tap the InvizBox logo on the top of the device.

Connectivity



Solid green -
VPN Connected



Solid orange -
Behind a captive portal or No VPN network



Solid red -
Not connected to WiFi



Flashing orange -
Connected to WiFi, VPN not connected yet

The above colours show the InvizBox Go WiFi LED status at all states of connection.

Safety



Ventilation.

Always use your InvizBox Go in a well ventilated space.



Don't Disassemble.

Never open your InvizBox Go.



Power.

Always charge your InvizBox Go with a 1.0A or greater power supply.



Don't Expose To Liquids.

Never expose your InvizBox Go to liquids.



Avoid Dropping.

Avoid dropping your InvizBox Go as this could damage the device beyond repair.



Avoid High Temperatures.

During use your InvizBox Go can become hot. Avoid use in environments that are $\geq 35^{\circ}\text{C}$ / 95°F .

Customer Support

- Help is available through the Administration Interface or at: <https://support.invizbox.com/>



- Can't connect to <http://inviz.box>:
 1. Try <http://10.153.146.1>
 2. Use the "Sign in" pop-up on Android/iOS/Windows.
 3. Disable mobile data or Ethernet connection.
- You can find more information about your Warranty and Acceptable Usage Policy at: <https://invizbox.com/warranty>
<https://invizbox.com/aup>

Specifications



Capacity:	5000 mAh
Input:	5V / 1A
Output:	5V / 1.5A
Size:	125 x 70 x 12.5 mm
Weight:	300g / 11oz
Range:	10 Metres
Chipset:	MT7621
Speed:	880 MHz
WiFi:	300 Mbps BGN

support@invizbox.com

